Monitoring relays - GAMMA series

- AC/DC current monitoring in 1-phase mains
- Multifunction
- 16.6 to 400Hz
- Fault latch
- Supply voltage selectable via power modules
- 1 change-over contact
- Width 22.5mm
- Industrial design



Figure similar

Technical data

1. Functions

AC/DC current monitoring in 1-phase mains with adjustable thresholds, timing for start-up suppression and tripping delay separately adjustable, fault latch and the following functions

(selectable by means of rotary switch) Overcurrent monitoring **UNDER** Undercurrent monitoring

WIN Monitoring the window between Min and Max

2. Time ranges

Adjustment range Start-up suppression time: 0s 10s 0.1s Tripping delay: 10s

罗 3. Indicators

Green LED ON: indication of supply voltage

Green LED flashing: indication of start-up suppression time

Yellow LED ON/OFF: indication of relay output Red LED ON/OFF: indication of failure

of the corresponding threshold Red LED flashing: indication of tripping delay of the corresponding threshold

▶ 4. Mechanical design

Self-extinguishing plastic housing, IP rating IP40 Mounted on DIN-Rail TS 35 according to EN 50022

Mounting position:

Shockproof terminal connection according to VBG 4 (PZ1 required),

IP rating IP20

Tightening torque: max. 1Nm

Terminal capacity:

1 x 0.5 to 2.5mm2 with/without multicore cable end

1 x 4mm² without multicore cable end

2 x 0.5 to 1.5mm² with/without multicore cable end 2 x 2.5mm² flexible without multicore cable end

▶ 5. Input circuit

Supply voltage: 12 to 400V AC

terminals A1-A2 (galvanically separated)

selectable via power modules TR2

Tolerance: according to specification of

power module

Rated frequency: according to specification of

power module Rated consumption: 2VA (1.5W) Duration of operation: 100% Reset time:

Residual ripple for DC: Drop-out voltage: >30% of the supply voltage Overvoltage category: III (according to IEC 60664-1)

Rated surge voltage:

▶ 6. Output circuit

1 potential free change-over contact

Rated voltage:

750VA (3A / 250V AC) Switching capacity (distance <5mm): Switching capacity (distance >5mm): 1250VA (5A / 250V AC) Fusing: 5A fast acting Mechanical life: 20 x 106 operations Electrical life: 2 x 105 operations at 1000VA resistive load

max. 60/min at 100VA resistive load Switching frequency:

max. 6/min at 1000VA resistive load

(according to IEC 947-5-1) III (according to IEC 60664-1)

Overvoltage category: Rated surge voltage:

7. Measuring circuit

Measured variable: DC or AC sinus (16.6 to 400Hz)

Input:

20mA AC/DC terminals K-I3(+) 1A AC/DC terminals K-I2(+) 5A AC/DC terminals K-I1(+)

Overload capacity:

20mA AC/DC 250mA 1A AC/DC 3A 5A AC/DC 10A Input resistance: 20mA AC/DC 270

1A AC/DC $47m\Omega$ 5AAC/DC $10 \text{m}\Omega$

Switching threshold

10% to 100% of I_N Max: Min: 5% to 95% of I_{N}

III (according to IEC 60664-1) Overvoltage category:

Rated surge voltage:

▶ 8. Control contact Y (equipotential with measuring circuit)

Function: fault latch (bridge Y1-Y2)

Loadable: max. 10m Line length Y1-Y2:

Control pulse length:

normally closed contact in the input circuit Reset:

9. Accuracy

Base accuracy: ±5% (of maximum scale value) Frequency response: -10% to +5% (16.6 to 400Hz) Adjustment accuracy: ≤5% (of maximum scale value)

Repetition accuracy: ≤2% Voltage influence: Temperature influence: ≤0.1% / °C

10. Ambient conditions

-25 to +55°C (according to IEC 68-1) Ambient temperature:

-25 to +40°C (according to UL 508)

Storage temperature: -25 to +70°C Transport temperature: -25 to +70°C Relative humidity: 15% to 85%

(according to IEC 721-3-3 class 3K3) Pollution degree: 3 (according to IEC 60664-1)


Functions

When the supply voltage U is applied, the output relay R switches into on-position (yellow LED R illuminated) and the set interval of the start-up suppression (START) begins (green LED U flashes). Changes of the measured current during this period do not affect the state of the output relay. After the interval has expired the green LED is illuminated steadily.

For all the functions the LEDs MIN and MAX are flashing alternating, when the minimum value for the measured current was chosen to be greater than the maximum value.

Overcurrent monitoring (OVER)


When the measured current exceeds the value adjusted at the MAX-regulator, the set interval of the tripping delay (DELAY) begins (red LED MAX flashes). After the interval has expired (red LED MAX illuminated), the output relay switches into off-position (yellow LED not illuminated). The output relay again switches into on-position (yellow LED illuminated), when the measured current falls below the value adjusted at the MIN-regulator (red LED MAX not illuminated). If the LATCH-function is selected (bridge Y1-Y2) and the measured current remains above the MAX-value longer than the set interval of the tripping delay, the output relay remains in the off-position even if the measured current falls below the value adjusted at the MIN-regulator. After resetting the failure (interrupting and re-applying the supply voltage), the output relay switches into on-position and a new measuring cycle begins with the set interval of the start-up suppression (START).

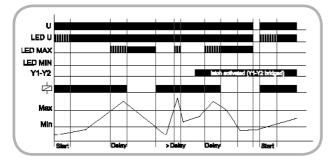

Undercurrent monitoring (UNDER)


When the measured current falls below the value adjusted at the MIN-regulator, the set interval of the tripping delay (DELAY) begins (red LED MIN flashes). After the interval has expired (red LED MIN illuminated), the output relay switches into off-position (yellow LED not illuminated). The output relay again switches into on-position (yellow LED illuminated), when the measured current exceeds the value adjusted at the MAX-regulator.

If the LATCH-function is selected (bridge Y1-Y2) and the measured current remains below the MIN-value longer than the set interval of the tripping delay, the output relay remains in the off-position even if the measured current exceeds the value adjusted at the MAX-regulator. After resetting the failure (interrupting and re-applying the supply voltage), the output relay switches into on-position and a new measuring cycle begins with the set interval of the start-up suppression (START).

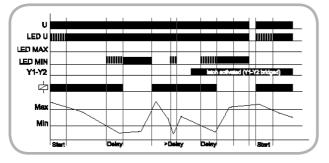

Window function (WIN)

The output relay switches into on-position (yellow LED illuminated) when the measured current exceeds the value adjusted at the MIN-regulator. When the measured current exceeds the value adjusted at the MAX-regulator, the set interval of the tripping delay (DELAY) begins (red LED MAX flashes). After the interval has expired (red LED MAX illuminated), the output relay switches into off-position (yellow LED not illuminated). The output relay again switches into on-position (yellow LED illuminated) when the measured current falls below the value adjusted at the MAX-regulator (red LED MAX not illuminated). When the measured current falls below the value adjusted at the MIN-regulator, the set interval of the tripping delay (DELAY) begins again (red LED MIN flashes). After the interval has expired (red LED MIN illuminated), the output relay switches into off-position (yellow LED not illuminated).

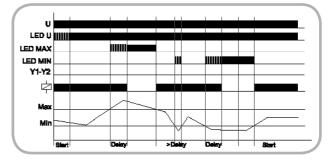


If the LATCH-function is selected (bridge Y1-Y2) and the measured current remains below the MIN-value longer than the set interval of the tripping delay, the output relay remains in the off-position even if the measured current exceeds the value adjusted at the MIN-regulator. If the measured current remains above the MAX-value longer than the set interval of the tripping delay, the output relay remains in the off-position even if the measured current falls below the value adjusted at the MAX-regulator. After resetting the failure (interrupting and re-applying the supply voltage), the output relay switches into on-position and a new measuring cycle begins with the set interval of the start-up suppression (START).




Connections


▶ Range 20mA with power module 24V AC with latch

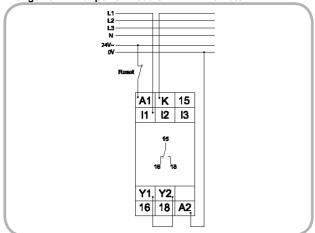


Range 1A with power module 230V AC with latch

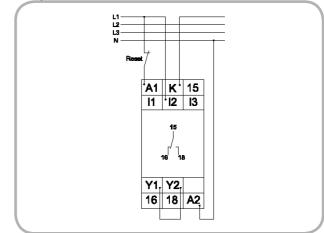

▶ Range 5A with power module 400V AC without latch

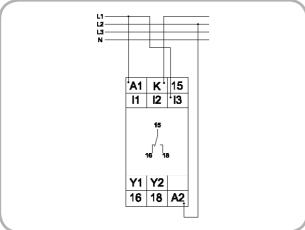

Dimensions

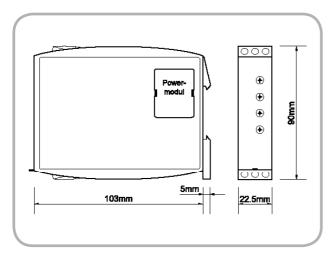

Notes

Subject to alterations and errors